


RTAHRW6CV1W

6-Channel Remote with Scroll Wheel Adjustment

User Manual

1. PRODUCT DIAGRAM

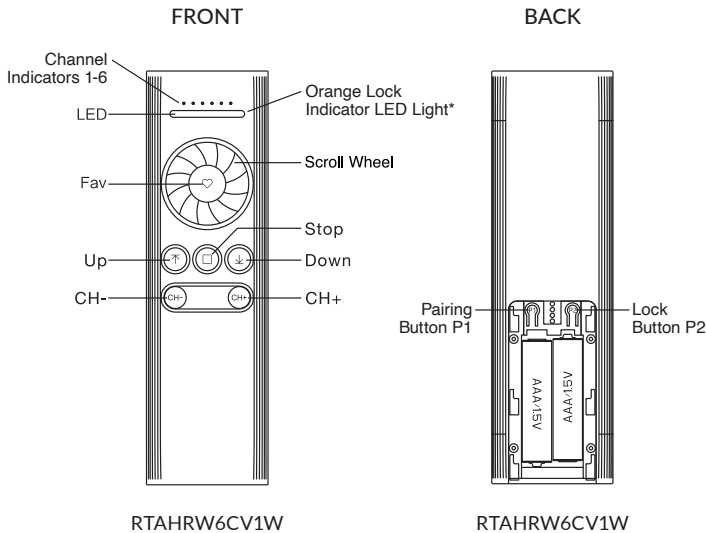

*Available on new version remotes

2. REMOTE SPECIFICATIONS

For more information, please refer to the remote label.

Electrical Specification	Standard
Battery Type	AAA battery*2
Working Temperature	14°-122°F
Radio Frequency	433.92M [±] 100KHz
Transmit Distance	>=98.5' indoor

3. CAUTION



 
WARNING: Important safety and operation instructions to be read before installation and use.

1. This product is intended for indoor use only. Do not expose the remote to moisture or extreme temperatures.
2. If the remote becomes less responsive and has a shorter transmission range, please check whether the battery needs to be replaced.
3. Use or modification outside the scope of this instruction manual will void warranty.
4. When the battery voltage is too low, the orange LED will flicker during operation.
5. Please properly dispose of used batteries and replace with only the specified battery type.

4. INSTRUCTIONS

Channel Selection



To change channels on the remote in order to pair with a single or multiple motors



Note: A maximum of 15 motors can be added to one channel. All motors added to the same channel will operate simultaneously. When all channels are illuminated, a command will control all shades.


Follow the motor pairing instructions (Doc# I-RTEC1) first before completing the remote settings below:

 Hide Unused Channels

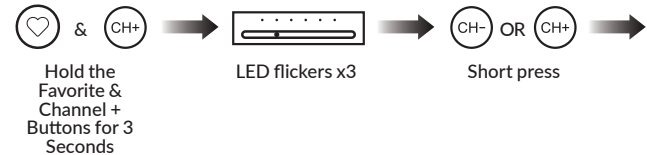


Locking the Remote

Prohibits any programming or settings from being changed on the Remote.

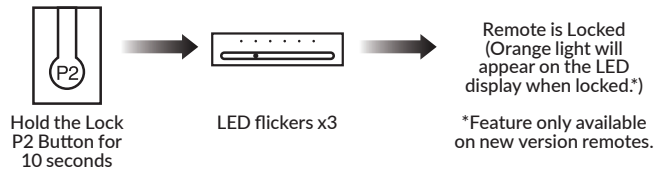

To unlock the remote and allow programming once again, repeat the steps above.

5. SCROLL WHEEL ADJUSTMENT

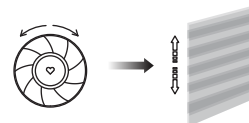

Rotate the scroll wheel to incrementally raise or lower the shade.

For other operations, please refer to the motor operation instructions (Doc # I-RTEC1).