

Updated on January 13, 2010



Instruction on Button Form Clasp with Lock Washer

The Button Form Clasp with Lock Washer (Stk# FCB95/S and FCB95/L) can be used with all our button form sizes and styles (Stk# FCB24 to FCB100, FCA24 to FCA60) to easily fasten tab-top draperies without sewing. It holds tabs firmly in place. It has many creative uses whenever pinning a button form onto fabric is needed.

Step 1. Lay the nail on the table, put the button back on top of the nail and push the button back all the way down (see Fig 1).




Step 2. Put the lock washer on top of the nail and push it all the way down with a small plier (see Fig 2). The protruding side of the washer has to face up.



Step 3. Take the wire out of the button with a plier (see Fig 3).



Step 4. Cover the buttons with your choice of fabric and engage the fabric onto the teeth (see Fig 4).

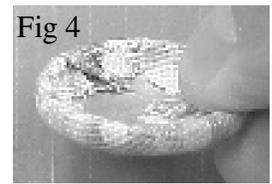


Step 5. Press and snap the button and button back together tightly (see Fig 5).



Step 6. Use a tailor's awl (stk#WW32) to make a hole at the fabric button position, and push the nail through the hole (see Fig. 6).



Step 7. Slide the nail clasp onto the nail and it will lock on the nail securely (Fig 7).

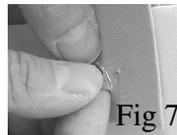

Note 1: FCB95/L has a longer shank (3/4") with 5 notches. You can cut it between the notches so the shank length will best accommodate the fabric thickness.

Note 2: For FCA24 to FCA60 buttons, you need to remove wire loop and insert the nail in one of the two holes on the button back. Follow steps 1 and 2 to lock the nail on the button back. Now you can make FCA button form as usual.

I-72

Updated on January 13, 2010



Instruction on Button Form Clasp with Lock Washer

The Button Form Clasp with Lock Washer (Stk# FCB95/S and FCB95/L) can be used with all our button form sizes and styles (Stk# FCB24 to FCB100, FCA24 to FCA60) to easily fasten tab-top draperies without sewing. It holds tabs firmly in place. It has many creative uses whenever pinning a button form onto fabric is needed.

Step 1. Lay the nail on the table, put the button back on top of the nail and push the button back all the way down (see Fig 1).




Step 2. Put the lock washer on top of the nail and push it all the way down with a small plier (see Fig 2). The protruding side of the washer has to face up.



Step 3. Take the wire out of the button with a plier (see Fig 3).



Step 4. Cover the buttons with your choice of fabric and engage the fabric onto the teeth (see Fig 4).

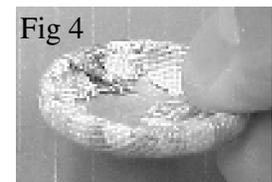

Step 5. Press and snap the button and button back together tightly (see Fig 5).



Step 6. Use a tailor's awl (stk#WW32) to make a hole at the fabric button position, and push the nail through the hole (see Fig. 6).



Step 7. Slide the nail clasp onto the nail and it will lock on the nail securely (Fig 7).



Note 1: FCB95/L has a longer shank (3/4") with 5 notches. You can cut it between the notches so the shank length will best accommodate the fabric thickness.

Note 2: For FCA24 to FCA60 buttons, you need to remove wire loop and insert the nail in one of the two holes on the button back. Follow steps 1 and 2 to lock the nail on the button back. Now you can make FCA button form as usual.