



# AUTOMATE™

A DIVISION OF ROLLEASE ACMEDA

## Quick Programming Guide




# 1. Pair shade to remote


Select channel on controller.



Hold **P1** button on motor head.

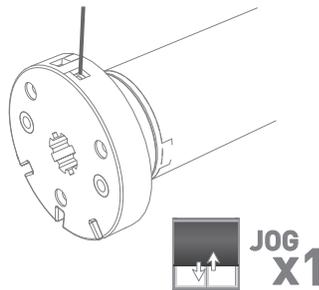

Release **P1** button on motor head.

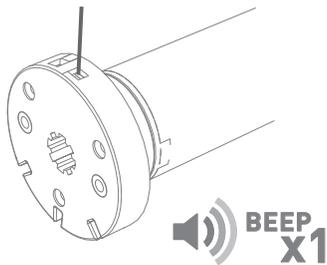

Hold **STOP** on controller.



## MOTOR RESPONSE

---



## 2.Change motor direction



To reverse shade direction,  
hold both **UP** and **DOWN**  
until the motor responds.

### MOTOR RESPONSE

---



JOG  
X1



BEEP  
X1

### 3. Set top limit



To save upper limit,  
hold both **UP** and **STOP**.



### Set lower limit

To save lower limit,  
hold both **DOWN** and **STOP**.

#### MOTOR RESPONSE



JOG  
X2



BEEP  
X3

## 4. Adjust lower limit



Hold both **DOWN** and **STOP** on controller.



Move shade to desired lowest position by pressing the **DOWN** arrow.



To save lower limit, hold both **DOWN** and **STOP**.

### MOTOR RESPONSE

---



## 5. Adjust upper limit



Hold both **UP** and **STOP** on controller.



Move shade to desired upper position by pressing the **UP** arrow.



To save upper limit, hold both **UP** and **STOP**.


### MOTOR RESPONSE

---



*\*Not required for setup*

## 6. Set/Delete a Favorite Position

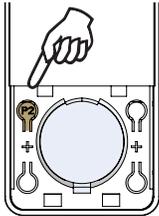

Press **P2** on controller.



Press **STOP** on controller.



Press **STOP** on controller.


MOTOR RESPONSE

---



*\*Not required for setup*


## 7. Create/Delete groups using P2

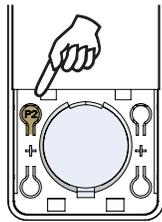

Press **P2** on controller **A**.



Press **P2** on controller **A**.

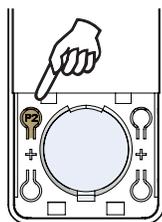


Press **P2** on controller **B**.

MOTOR RESPONSE



*\*Not required for setup*

# 8.Adjust Motor Speed

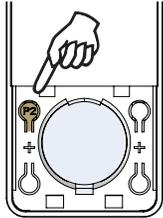

Press **P2** on controller.



Press **UP** on controller.



Press **UP** on controller.


## MOTOR RESPONSE

---




*\*Not required for setup*

## 9.Lock Remote

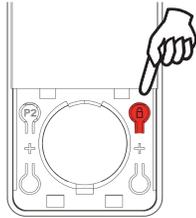

To switch modes, hold right **LOCK** button for **5 seconds**.

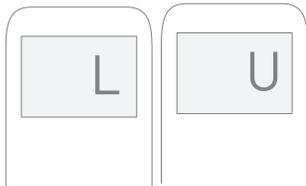

### For 15 CH

LCD displays "L" when locked,  
LCD displays "U" when unlocked.



### For 1 CH

LED solid on when locked  
LED blinking when unlocked

# 10.Hide Channels


Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.



Press **“STOP”** and **“CH”**




Continue to hold **“CH”** and press **“UP”** or **“DOWN”** to select channels

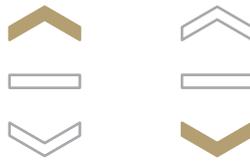

Press **“STOP”** to lock in

# 11. Setting Modes

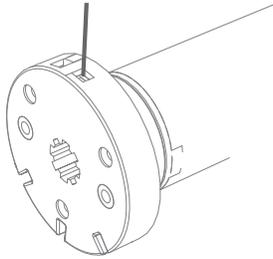

The **P1 Button** is utilized to administer motor configurations as described below.

Hold **P1 button** on motor head

## ACTIVE PAIRING MODE

---



## SLEEP MODE

---



## REVERSE DIRECTION

---



## RESET TO FACTORY SETTINGS

---




*\*Not required for setup*

# 12. Step Mode

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.

Hold **UP & DOWN**  
on controller

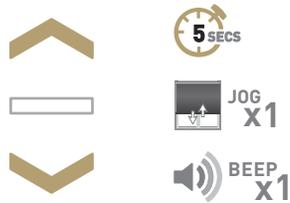


Press **STOP**  
on controller



If motor is in Step Mode, use following steps to change to Roller Mode

Hold **UP & DOWN**  
on controller

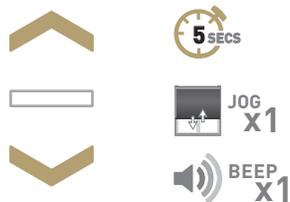

Press **STOP**  
on controller




*\*Not required for setup*



Voice Control



Home Automation Integration

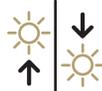

Sunrise & Sunset Detection




Live Feedback

## ROOMS

Group Automate shades by room and conveniently control them accordingly.

---

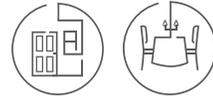

## SCENES

Personalise shade control and organise how your shades operate by specific daily events.

---



## TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.


---



## MULTIPLE SHADE TYPES

Awnings, Roller shades, External shades, Cellular ...Control every shade type from one screen.

---

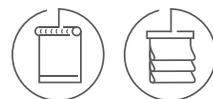

# AUTOMATE™

A DIVISION OF ROLLEASE ACMEDA

**+1 203-590-5318**

[ustechsupport@rolleaseacmeda.com](mailto:ustechsupport@rolleaseacmeda.com)



---

[automateshades.com](http://automateshades.com)