

5v Micro USB/Magnetic Cable Kits RTM5VLMCK1, RTM5VLMCK5, RTM5VLMC25



Magnetic Tip

1. Rotate the Motor Cap on the 5V motor head in order to access the charging terminal port on the motor
2. Connect the magnetic tip into the Micro USB port of the motor you wish to charge.
2. Ensure that the orientation of the magnetic tip is correct and allow the cable connection later on the charging process.



Magnetic Cable

Connect your charger (the one you usually use to charge the motors) to the magnetic cable as the picture shows.



Start Charging

After you have connected the cables into the motor, make sure that the green LED is blinking in order to confirm that the motor will begin to charge. Once the motor has finished charging process, the green LED will become solid. Leave the magnetic tip connected to the motor head for future charging. Slowly pull from the charger's end from the motor head.

For further information visit [automateshades.com](https://www.automateshades.com) or watch the video on <https://www.youtube.com/watch?v=XjmUBF8Wqqo>