

R ROOMSCAPES

How-To Guide

MID-CENTURY MODERN DINING

RIPPLEFOLD DRAPERY HEADER

with the addition of translucent Woven Buckram



ROWLEY PRODUCTS	ITEM #
R-TEX Translucent Woven Buckram (4")	<u>TT54</u>
R-TEX Translucent Woven Buckram (6")	<u>TT56</u>
Jumbo Wonder Clips	<u>QC40</u>
W&I Cambridge Sateen Lining, Black	<u>LNW50</u>

INCORPORATE TRANSLUCENT WOVEN BUCKRAM INTO RIPPLEFOLD DRAPERY HEADER FOR A SOFT, SMOOTH, AND BEAUTIFUL HEADER.

THIS TECHNIQUE ALSO USES THE 'NO STITCHES SHOWING' METHOD.

- Cut the panel fabric using the normal allowances for hem and header when making Ripplefold panels.
- A 2" double header was used for this method.
- If using multiple widths, stitch together. Mark bottom hem and close in your method of choice.

1 Fold and press the double 2" header for the Ripplefold panel.


2 Fold and press the side hems.

3 Unfold the top header, pin or use Jumbo Wonder Clips QC42 to hold the Ripplefold snap tape about 1/8" away from the fold.

4 Cut the translucent buckram the width of the panel from lead edge to the return edge.

5 Fold the header towards the back of the panel.

6 Insert the buckram under the header to the top of the panel.

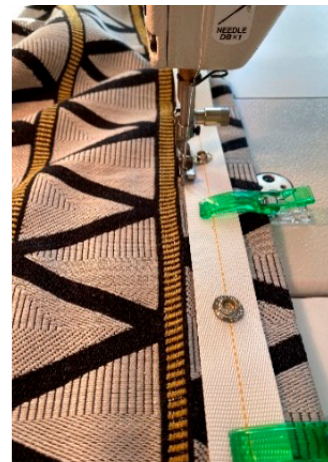

Complete the Ripplefold header with Translucent Buckram

- 1 Prepare the drapery lining. Hem the bottom edge in your method of choice.
- 2 Table the panel with the lining. Fold and press the side hems.
- 3 Tuck the lining under the panel header on top of the buckram.
- 4 Close the side hems in your method of choice.
- 5 Clip the header with Jumbo Wonder Clips.
- 6 Stitch the header in place by creating a stitch line beside each snap where the fabric will become a back fold.



VERY FEW STITCHES SHOWING ON
THE FRONT OF THE PANEL



TRANSLUCENT BUCKRAM INSIDE THE HEADER