


 ROOMSCAPES

How-To Guide

MID-CENTURY MODERN DINING

TRIANGLE SHAPED BOLSTER

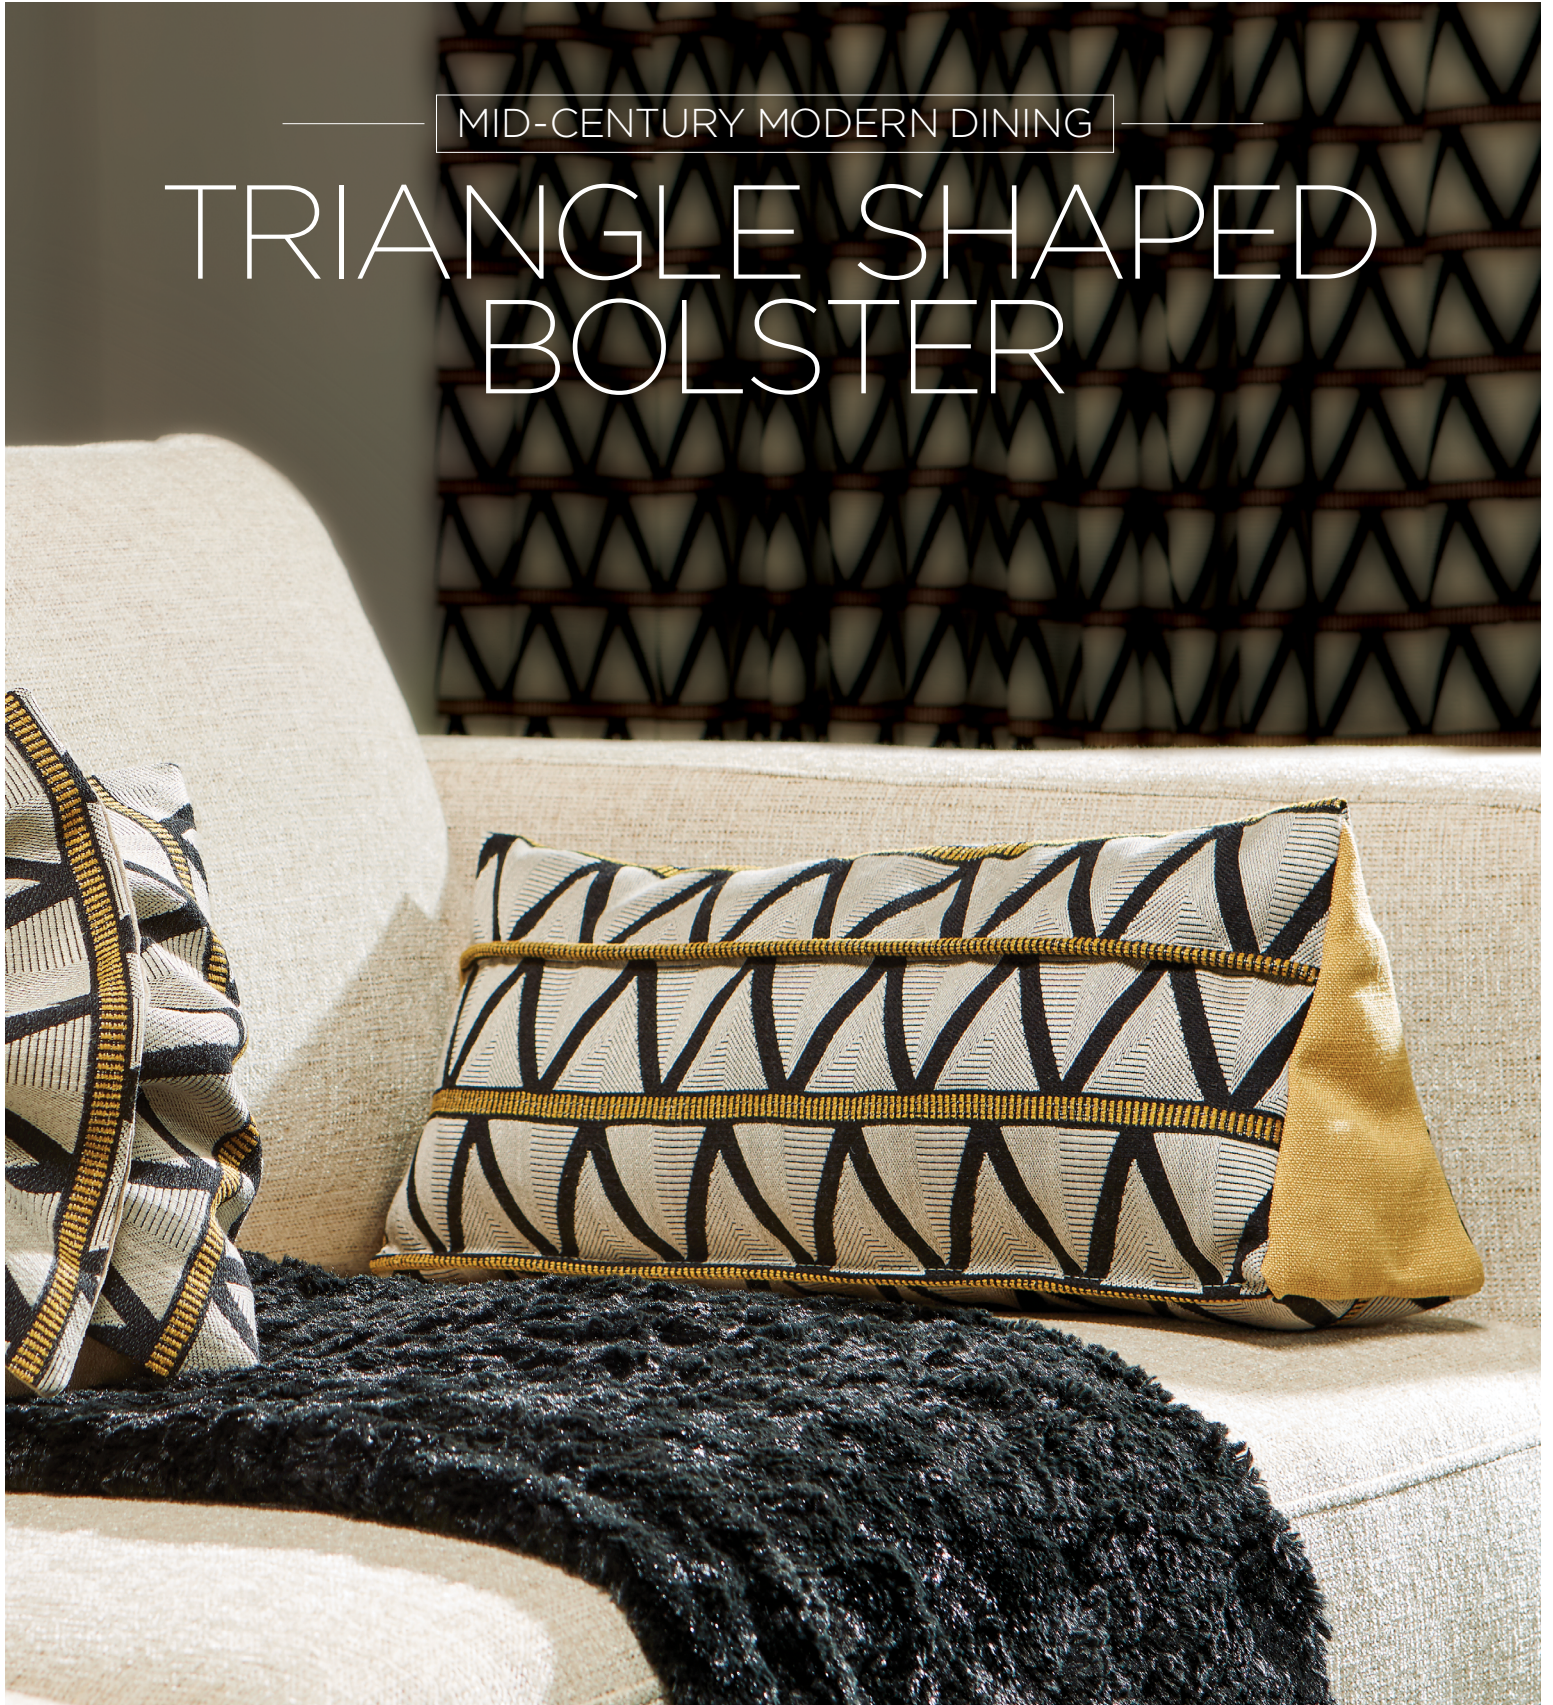


ROWLEY PRODUCTS	ITEM #
Polyester Cluster Stuffing	<u>PF91</u>
Medium Welt Cord	<u>WC10</u>
Invisible Zippers	<u>EVR32</u>
Invisible Zipper Slides	<u>EVP3</u>

- Determine the bolster finished size. Cut the fabric for the bolster body the bolster width plus two SA (seam allowance). For this bolster, 1/2" SA was used.
- Cut the fabric length to include the finished size plus two SA, 1/2" was used for this bolster.
- An invisible zipper was used as the closure method.

1 Cut two triangles for the ends of the bolster. Stabilize the two angled sides with a stay stitch just shy of the 1/2" SA. This will help keep the fabric from stretching as you sewing to the bolster pillow.

2 Serge around all 4 sides of the bolster body fabric.

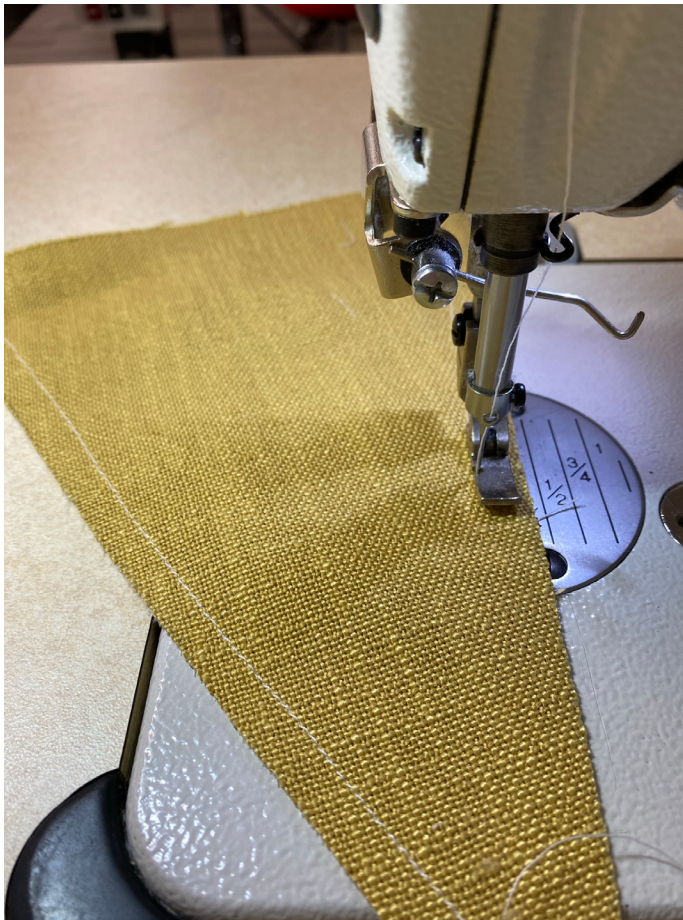

Create the bolster texture and insert zipper.

For the pillow texture, cut one piece of cording for each tuck, the fabric width minus 1".

- 1 Place the cording at the placement for the tucks on the wrong side of the fabric, centering it between the edges.
- 2 Pin the fabric around the cording.
- 3 With wrong sides together, stitch the tucks with the cording inside.
- 4 Insert an invisible zipper in the seam of the bolster bottom.



Complete the triangle shaped bolster.

- 1 Pin the triangle ends to the ends of the bolster. Stitch in place.
- 2 Turn the bolster right sides out.
- 3 Make an insert for the triangle bolster and fill with polyester clusters.
- 4 Put the insert inside the bolster to complete your project.

