



## Laminated Roller Shade Using an EZ Rise Cordless Roller Spring System

Utilize the EZ Rise Roller Shade headrail system to create a safe window treatment, Certified Best for Kids™.



### Materials & Supplies

Rowley Products	Item #
Room Darkening Window Shade Cloth	<a href="#">JV48/</a>
Laminating Adhesive	<a href="#">FA40</a>
Weight Bar:	
- Wood Shade Slat	<a href="#">CR63</a>
- Bottom Rail for Roller Shades	<a href="#">RS40/W</a>
End Cap for Bottom Rail	<a href="#">RS48/W</a>
Fray-A-Way Spray	<a href="#">AS41</a>
EZ Rise Cordless Roller Spring Shade Starter Kit:	
- 28" - 48" wide, 4 lb.	<a href="#">ERSK4</a>
- 36 1/2" - 72" wide, 6 lb.	<a href="#">ERSK6</a>

## Laminated Roller Shade: Step-By-Step Instructions

### Benefits:

- Use R-TEC Automated Shade Tubes or EZ Rise Spring system for cords free shades.
- Add visual interest to home interiors by using one of a wide range of home décor fabrics.

### Supplies:

- Decorative Fabric – should have 14" - 16" additional fabric for shade length and at least 3" all the way around
- A clean, firm work surface, large enough to accommodate your shade. A rotary cutting mat is a preferred surface.
- Shade Laminating Adhesive - [FA40](#) or [FA45](#)
- Room Darkening Window Shade Cloth – [JV48/](#) (available in 36", 45", 54", 72" & 3, 10, 30 yard lengths)
- Carpenter's Square
- Straight Edges
- Rotary Knife
- Sharp Scissors
- Fray-A-Way Spray – [AS41](#)
- Two short nap paint rollers
- 1" masking or blue painter's tape
- Headrail system for the shade




NOTE: It is a good idea to practice making a small shade sample prior to using the fabric for your customer's shade.

## Prepare the Fabric:

- 1 The fabric should be free from creases. Iron if necessary.
- 2 Cut the fabric as described previously.
- 3 Roll the fabric on a fabric tube, wrong side out.

## Laminating:

- 1 Place the shade cloth on the worktable.
- 2 Tape the shade cloth to the table to prevent shifting as you work.
- 3 Pour the shade laminating adhesive to the shade cloth.
- 4 Apply the adhesive to the shade cloth using a clean paint roller, rolling in all directions until the adhesive becomes tacky.

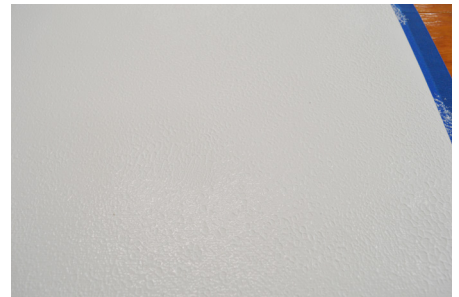

- 5 Apply the shade fabric to the shade cloth.
- 6 Carefully unroll the fabric on the shade cloth, smoothing from the center to the edges by hand.
- 7 Use the second (clean) paint roller to roll over the shade cloth, removing any air bubbles.
- 8 Allow the adhesive to completely dry.
- 9 Mark the shade cloth for width and length.
- 10 Carefully cut the shade cloth.



## Complete the Shade:

- 1 Spray the edges of the shade with Fray-A-Way spray – always test first on a fabric remnant.
- 2 Create a bottom hem in the shade.
- 3 Fold up the bottom and hold in place with Jumbo Wonder Clips.
- 4 Attach the roller shade to the shade tube.

