


Iron-On Bonding Tape Examples

Example 1

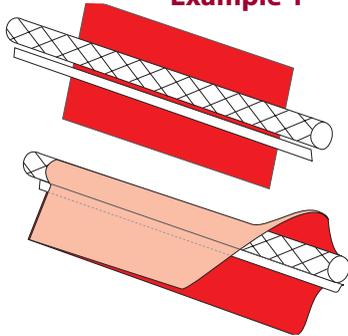

Example 1

Bonding the fabric around Walt Cording to have a fabric tab for use in making pillows, top treatments, bedspreads etc.

- 1- Cut fabric on the bias.
- 2- Lay the welt cording in the center of the fabric.
- 3- Peel release paper off (FT37) iron-on bonding tape.
- 4- Place iron-on bonding tape beside welt cord.
- 5- Fold fabric over and iron, with heat and steam setting.

Example 2

Bonding fabric around Walt Cording without a fabric tab for braiding, tie-backs, etc.

- 1- Iron strip of bonding tape to the face fabric (for a stronger bond one piece of bonding tape should be used on each side of fabric being bonded).
- 2- Peel release paper off and bring the two pieces of fabric together around the welt cord, then iron in place. (For shirred look: hand gather fabric after ironing.)
- 3- Ends can be tucked in and sealed using iron-on bonding tape.

Example 2

