

### Sheer, Draped Ceiling Treatment with AriA™ Metal Hardware

A ceiling treatment can create visual drama, soften a space and absorb sound for more private conversations. In our Quaint Café, we created a swag treatment and installed it to the ceiling with decorative AriA™ Metal Hardware.

#### Materials & Supplies

##### Rowley Products

- Gütermann Polyester Thread
- Wood Ruler, 6"
- AriA™ Metal Hardware
- 12' Long Tape Measure

##### SKU

- [TG1M/](#)
- [MR6](#)
- [AriA](#)
- [DT12](#)




#### Sheer, Draped Ceiling Treatment with AriA™ Metal Hardware: Step-By-Step Instructions

This how-to guide covers the steps to fabricate a swag ceiling treatment as well as installation steps. Our ceiling treatment finished at 54" wide, had 5 swoops and used 96" of fabric in each swoop. Each swoop covered 78" of the ceiling.

#### Cutting and Prepping the Face Fabric:

- 1 Make a plan for number of swoops, length and width of each swoop and the size rod pocket needed for the hardware you want to use.
- 2 Figure cuts and seams as needed.

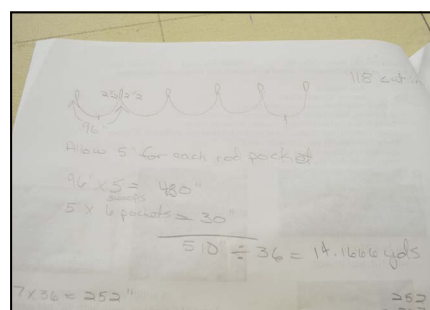

3 Join pieces as needed.

A. If using a sheer, plan to do French seams to hide any raw edges.



4 Turn under and finish a double 1 1/2" side hem on both long sides.

5 On both ends, turn under and close a rod pocket large enough for your hardware.

A. We used a 5" rod pocket.



6 Measure down fabric length to next rod pocket.

7 Fold in rod pocket and stitch across to close.



8 Complete until all rod pockets are completed.



## Installing the Treatment:

1 Measure and mark for bracket placement.


2 Take brackets apart.



3 Install mount plates at marks.

4 Slide rods through rod pockets.

5 Place bracket cup on rod (tighten), then treatment, then other cup, then end caps (tighten).

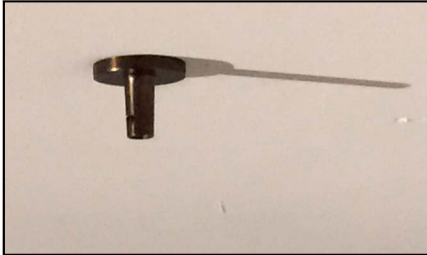

6 Do for all rod pockets.

7 Place cups into mount plates and tighten, adjusting as needed for spacing.

8 Dress as needed.

