

Rowley project list: **Crib Bedding**

Crib bedding is now a much regulated area, different state by state. Before selling / fabricating any crib bedding be sure to check your state regulations for approved content.



MATERIALS & SUPPLIES

Rowley Products

- R-TEX Polyester Welt Cord - ¼"
- Fringe Adhesive
- Invisible Zipper Chain
- Nylon Invisible Zipper Slides
- Crib Size Duvet Insert
- R-TEX Micro Welt Cord
- Hanes Classic Napped Lining
- R-TEX Sew-On Hook Tape - 2"
- R-TEX Sew-On Loop Tape - 2"

SKU

- [WCP2/](#)
- [FA10](#)
- [EVR32](#)
- [EVP3/](#)
- [DU20](#)
- [WC85](#)
- [LN48](#)
- [HT200/](#)
- [LT200/](#)

CRIB BEDDING: STEP-BY-STEP INSTRUCTIONS

Our crib project includes a duvet cover and a bed skirt, made to fit our specific crib. All measurements given fit our project only. The duvet finished out at 51" x 27". The skirt was made detachable from the decking, covered three sides only and finished 50 ½" wide for the front, 27 ¾" wide for the sides and all 16 ¼" long. For detailed step-by-step instructions on fabricating the mattress cover, see the Project Guide titled Changing Table Pads.

Crib Duvet:

Cutting and Prepping the pieces:

- 1** Cut the front and back fabric 53" x 29" to allow for take-up once the insert is inserted.
- 2** Cut and make enough welt cord to go around the front, plus a few inches for joining.

3 Glue-baste the welt to the front, making relief cuts at the corners.



4 Sew welt to front, making the join at the machine.



5 Cut a chain of invisible zipper 56". Add the zipper pull to one end.

6 Mark the back of the zipper chain for a start and stop sewing placement.

7 Make coordinating marks on the bottom of the front, marking within the seam allowances.

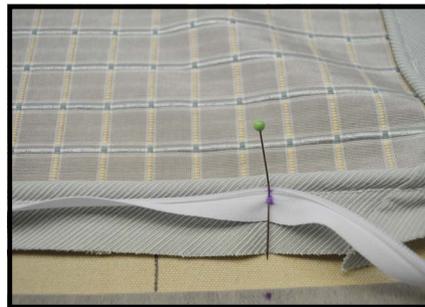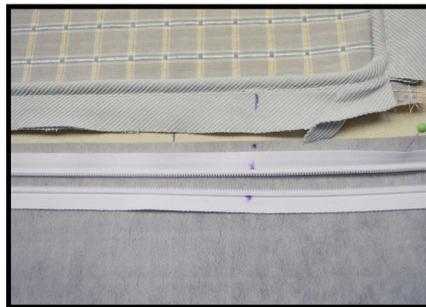

Putting In the Zipper:

1 On the top, open the zipper and pin one side to the front, matching marks.

2 Use a cording foot to sew on the zipper to the side with the welt; use a zipper or skinny foot to sew on the side without the welt.

3 Test zipper to be sure you have not sewn too close to the teeth.



- 4 Close the zipper all but a few inches.
- 5 Sew across the zipper chain at the top and bottom to close off the zipper.
- 6 Place right sides of front and back together and sew the remaining seam on either end of the zipper.
- 7 Clip off any excess chain.



Finishing the Duvet:

- 1 Finish sewing the front to the back.
- 2 With the duvet still inside out, mark for insert snap placements.
- 3 Sew on duvet snaps.
- 4 Snap on insert.
- 5 Turn right sides out, close zipper and fluff.





Crib Skirt:

You will have three panels (two sides and a front), four overlays with welt cord detail and a detachable decking for this project.

Making the Decking:


- 1 Cut decking material 53 ½" x 31 ¼" to finish at 51 ½" x 27 ¾".
- 2 At the top (one long side) turn under and press a double 1 ½" hem.
- 3 At the other three sides, turn under and press a double ½" hem.
- 4 Top stitch all hems, mitering corners if you wish.

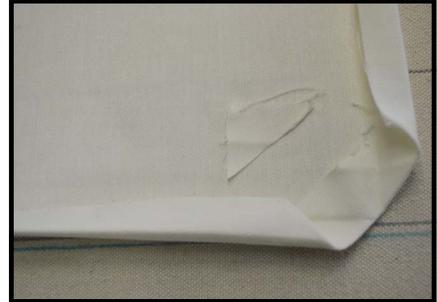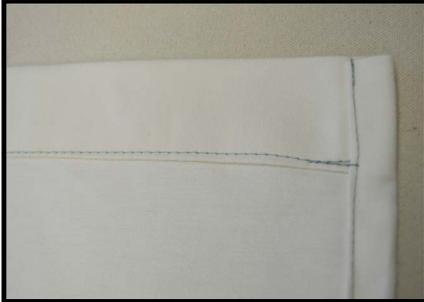

- 5 Sew strips of 2" hook to the three sides with the small side hems.

Making the Panels and Overlays:

- 1 Cut three pieces of face fabric, matching patterns, at 21 ½" x the width of the fabric.
- 2 Cut two widths to 34", but leave the third width as is.
- 3 From the left-overs, cut 2 overlays at 10 ¼" and 2 at 11".
- 4 On each bottom, turn under and press a double 1 ½" hem.
- 5 Pin lining to panel and pin lining to overlays.
- 6 Sew pieces together, sewing along the first press line (at 1 ½").
- 7 Fold right sides out and press hem toward face fabric.

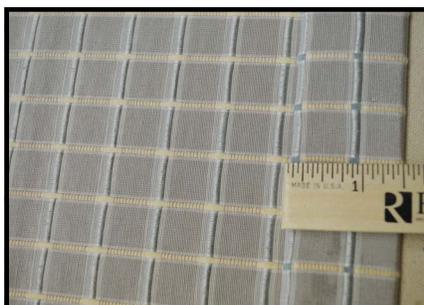



- 8 Open each panel piece, match tops with right sides together and sew side seams using ½" seam allowance.
- 9 Turn right sides out and re-press.
- 10 On each overlay, add a row of micro-welt to the side seam before sewing.



- 11 Find the finished width of each panel, measuring from the center out.
- 12 Turn excess width to the back to form a half-pleat on each side.
- 13 Mark the finished length on all panels and overlays.
- 14 Place overlays on panels and sew together, sewing within the seam allowance or above the finished length marks.

Making the Waistbands:

- 1 Cut one waistband per panel about 7" x the width plus 2".
A. You will need one waistband per panel for a total of three.
- 2 Fold in half lengthwise and crease.
- 3 Fold in and iron in ½" seam allowances along all long edges.

- 4 Sew a strip of 2" loop tape to one long side of each prepared panel, sewing through one thickness of fabric only.
- 5 Fold waistband right sides together and sew short sides.
- 6 Place right side (non-looped) of waistband against the right side of the panel.
- 7 Sew along finished length marks to join.
- 8 Turn waistband to back and hand close.

