

Faux-Fur Godet Treatment

The window treatment from our Winter Wonderland Master Bedroom Roomscape features Godets as the center pleat, which add fullness to the bottom of the drapery panels for a professional and stylish look.



Materials & Supplies

Rowley Products

W&I Lancashire English Domette

W&I Cambridge Napped Sateen

Scissors

R-TEX Polyester Welt Cord - ¼"

Glass Head Straight Pins

John James Hand Sewing Needles

A&E Upholstery Thread

Straight Edge Rulers

R-TEX Non-Woven Permanent

Buckram - 6"

Gem Upholstery Nails

Upholstery Nail Locks

Item

[LNW16/](#)

[LNW48/](#)

[CU22](#)

[WCP2/](#)

[TP49](#)

[TP118](#)

[TU6K/](#)

[MR19-MR28](#)

[BN46](#)

[UN25/](#)

[UN11/L](#)

Faux-Fur Godet Treatment: Step-By-Step Instructions

Snow white faux fur adds a bit of festive to our holiday red drapery panels.

Preparing the Pieces:

The finished length of our treatment is 115" + a 4" puddle.



1

Cut the face fabric to 107".

A. This allows for a 1" seam at the bottom and a double 6" header.

2 Cut the godet fabric 25" long x the usable width of the face fabric + 48".

3 Cut lining to 144" + 6" for a double 3" bottom hem.

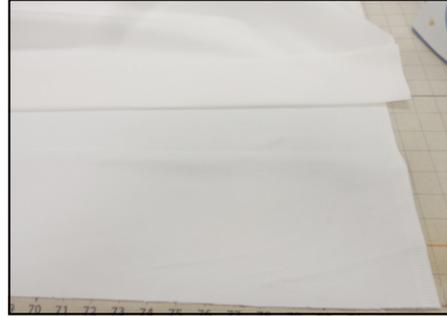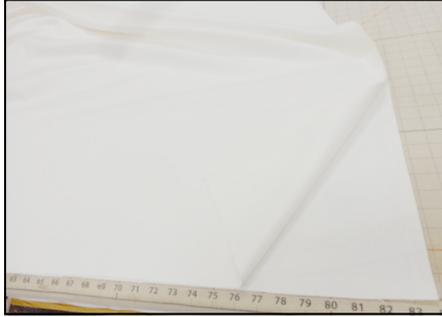

4 Cut interlining to 113" + tabling for even hem.

5 On the lining turn up a double 3" hem, press and close hem.

6 On the interlining, pull threads until you have a straight line then serge bottom hem even.





7 Cut and make enough welt cord to run the width of all panels plus joins.

Making the Panel:

1 Lay face fabric face down on the table.

2 Turn under side hems for a double 1 ½" hem. Press well.

3 At the bottom, sew on a row of welt cord, making good ends on the welt.

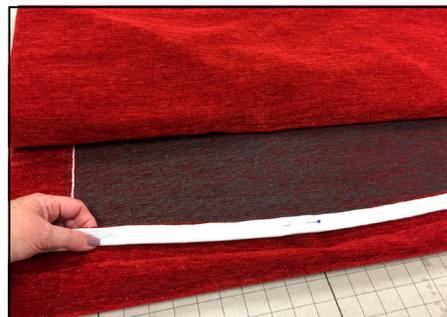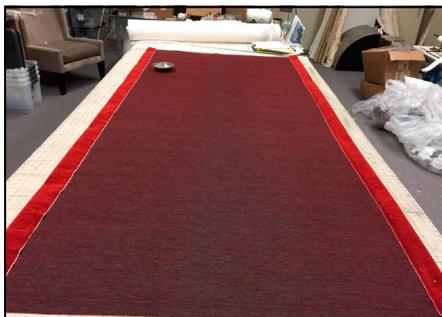

Preparing the Godets:

- 1 Lay fabric face side together folded in half, lengthwise.
- 2 Trim away one layer at the top corner so it is rounded, starting and ending at the 24" marks.
- 3 Trim bottom layer to match.
- 4 Serge all sides without stretching Godet.




Finishing the Panel:


- 1 Lay panel with welt face up on the table so the bottom is near you.
- 2 Find center of Godet and center of panel.
- 3 Match centers with right sides together.
- 4 Pin well.



- 5 Sew Godet to treatment only along the usable width of the panel.
 - A. You will have extra Godet fabric on the sides of the panel.
- 6 On the part that runs past the panel, turn under the seam allowance.
- 7 Fold the rest back so it aligns with the side.
 - A. The ends of the Godet will be wrong sides together.

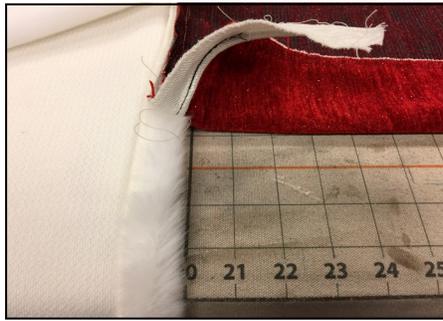


- 8 Lay in interlining and lining.
- 9 Pin side hems closed.
- 10 Continue to pin side hem at the Godet by turning under a seam allowance and pinning through only the top layer of the Godet.
- 11 Hand close side hems.

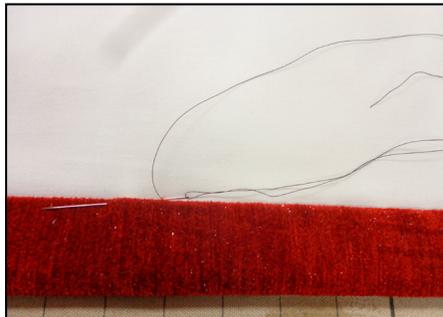

- 12 Measure and mark for finished length.
- 13 Trim if needed.
- 14 Fold in a double 6" header, adding a layer of 6" buckram.
- 15 Close header sides by hand.



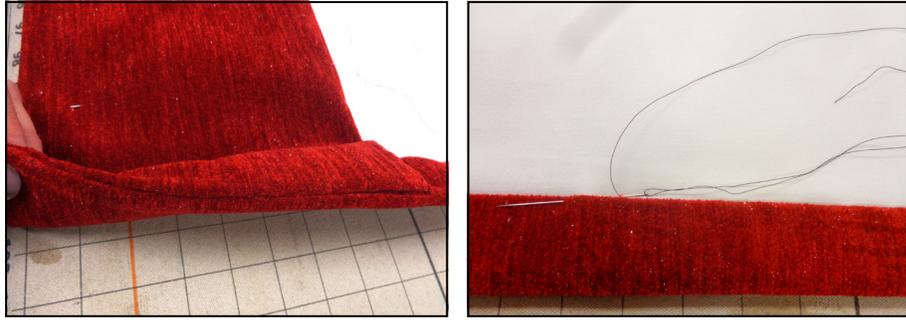

- 16 Measure and mark for pleats.
- 17 Sew in pleats.
- 18 Back at the table, tack pleats.
- 19 Add decorative nails by pushing through at the top tack point then push on a nail lock to hold in place.
- 20 Add a drapery pin to the back of each pleat.



