




WOOD HARDWARE Installation Instructions

Holdbacks

Thank you for purchasing your new holdback. With proper installation and care, it will provide you or your customer with years of beauty and trouble-free functionality. Clean with a soft cloth. Do not use harsh or abrasive cleaning supplies or polishes, which may damage the finish.

Tools Needed for Installation (not included):

- Tape measure and pencil
- Power drill with 1/8" drill bit for screws and / or 3/16" drill bit for plastic plug
- #2 Phillips bit or screw driver

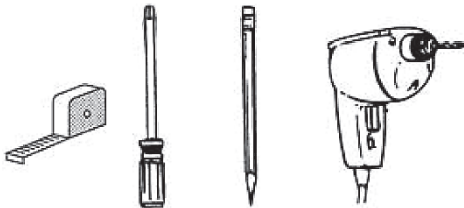

Package Includes

- Decorative wood medallion, extension and base: one of each. This will give a 4" projection from wall to back side of the medallion. Order extra extension if 6" projection is desired. Discard the extension if 2" projection is preferred (Use the holdbacks as medallions, etc.)
- 1 x Metal Bracket; 3 x Phillips head screws;
3 x Plastic plugs.

Tips for Successful Installation

- Securely attach all brackets to the mounting surface. Mount the brackets to wall studs or ceiling joists whenever possible. Use proper fasteners designed for your particular type of mounting surface. Hollow Wall Fasteners (sold separately) are recommended for dry walls.
- Make sure all the brackets line up evenly.

Holdback Installation

- Find desired locations to install the holdbacks, usually 2" to 6" outside the window frame; 40" to 48" up from the floor. Use tape measure and pencil mark bracket top hole positions. Make sure all holdbacks line up evenly.
- If installing into wood studs or joists, pre-drill a 1/8" pilot hole at pencil marks. Mount each bracket mount with the screws provided. For drywall installation, use the plastic plugs provided. Pre-drill a 3/16" hole for each plug. Mount the bracket mounts with the screws and the plastic plugs provided.
- Screw the hold backs on the metal brackets tightly against the wall.

