

Grom-A-Links can be used in many creative ways. They provide an easy way to attach decorative tassels, trims, batons to draperies and for controlling pleats. Grom-A-Links must be added to the grommet before the grommet is crimped.

Grom-A-Links can be attached to the front or back side of a drapery.

- To attach the Grom-A-Link to the front, insert Grommet Body Neck through a Grom-A-Link and hole on the front side of the drapery, as shown in Figure 2.

- To attach the Grom-A-Link to the back side, insert the Grommet Body Neck through hole on the front side of the drapery, then the Grom-A-Link and lastly, the grommet washer. The Grom-A-Link can even be used in place of the washer.

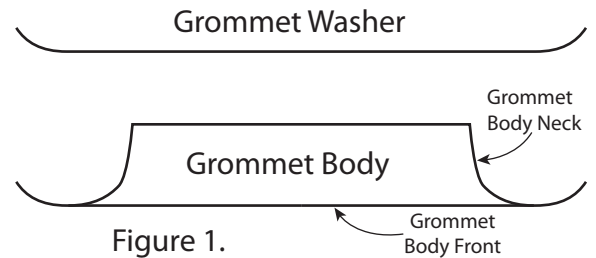


Figure 1.

Baton Attachment

A Grom-A-Link can be used to attach a baton on either the front or back side of a drapery panel. The baton snap is hooked into the small hole of the Grom-A-Link.

Decorative Trim Attachment

Use Grom-A-Links on the front of every grommet in a drapery for a convenient way to add decorative tassels and trims, as shown in Figure 3.

Pleat Control

A grommeted drapery will open and close easier with Grom-A-Links installed in the manner shown below. Grom-A-Links are used behind every grommet in a drapery panel for pleat control in the orientation as shown in Figure 4. Grom-A-Links can be used in place of grommet washers for less bulk. Cut our #6 metal bead chain BCH6 or BCK6 into equal length pieces depending on the desired space between pleats. Thread each bead chain into the neighboring Grom-A-Links, then use #6 metal bead chain connectors BCC6 to secure each end of the bead chain in place as shown in Figure 5.

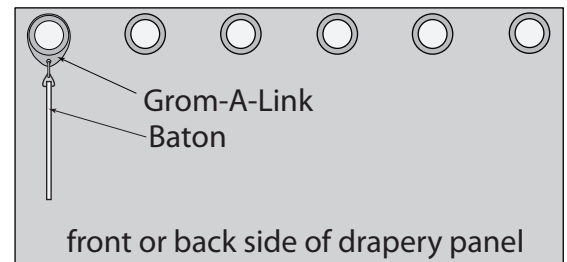


Figure 2. Grom-A-Link for Baton Attachment

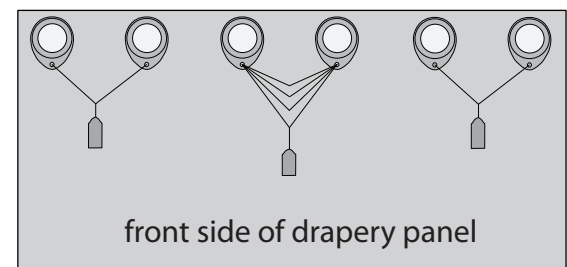


Figure 3. Grom-A-Link for Decorative Trim Attachment

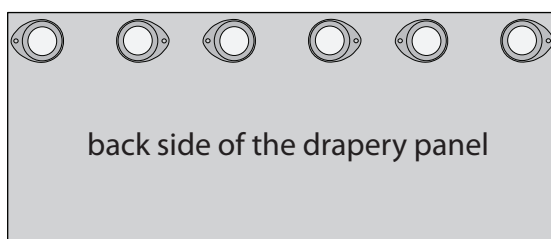


Figure 4. Grom-A-Link for Pleat Control

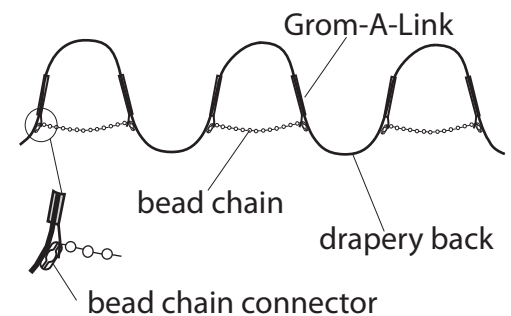


Figure 5. Top View of a drapery with bead chains attached to Grom-A-Links