



Pouff Swag Holder


- Quickly forms beautifully decorated Pouff Swags.
- With 2 holders a full window treatment can be made.
- Can be mounted to form topper for Bishop Sleeve Treatments.
- Swag holder extends out 5 3/4" from wall and can be used on either side of the window.
- Ideal for curved top or Paladian windows.
- Made of clear durable Lexan®.

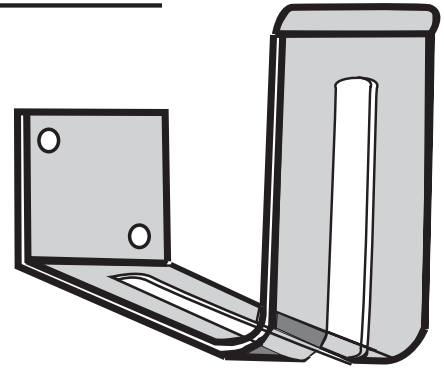


STOCK # HLB5

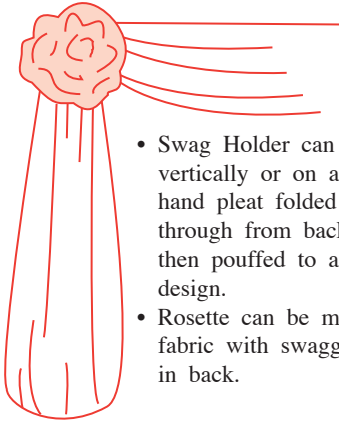


- Swag Holder can be mounted vertically or on angle. Fabric is hand pleat folded and pulled through from back to front and then pouffed to achieve the desired design.
- Rosette can be made of coordinating fabric with swagged fabric draped in back.

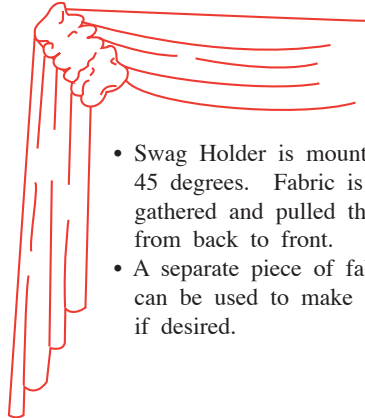

- Swag Holder is mounted at 45 degrees. Fabric is hand gathered and pulled through from back to front.
- A separate piece of fabric can be used to make Pouff if desired.

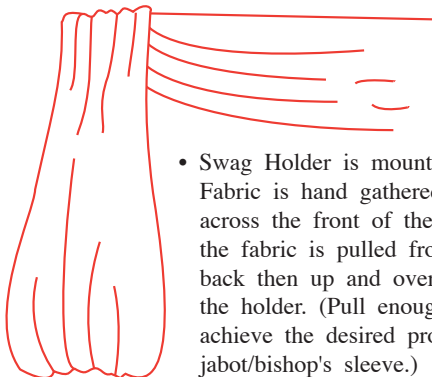


- Swag Holder is mounted horizontally. Fabric is hand gathered to form a swag across the front of the window. Then the fabric is pulled from front to back then up and over the top of the holder. (Pull enough fabric to achieve the desired proportion in the jabot/bishop's sleeve.)

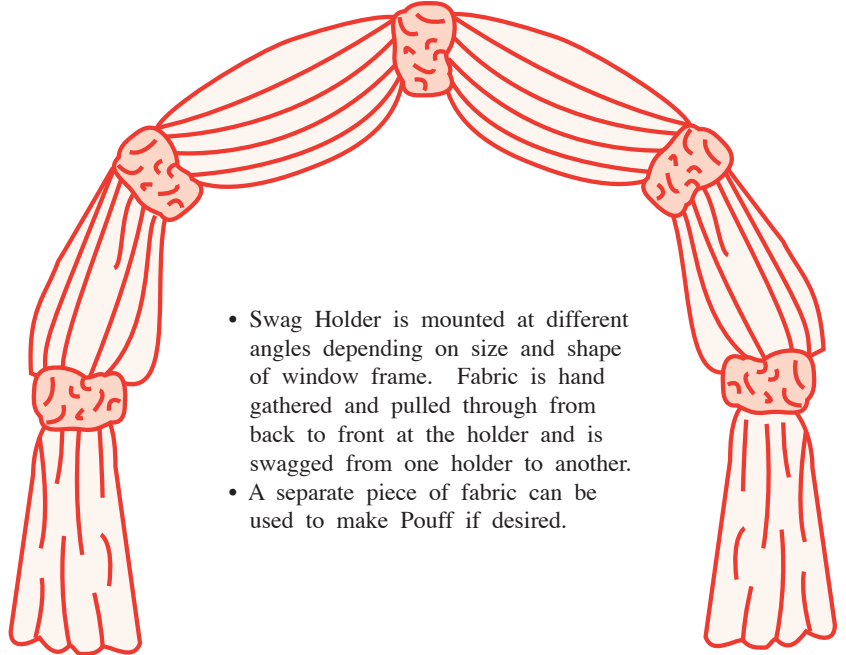

- Swag Holder is mounted at different angles depending on size and shape of window frame. Fabric is hand gathered and pulled through from back to front at the holder and is swagged from one holder to another.
- A separate piece of fabric can be used to make Pouff if desired.



- Swag Holder can be mounted horizontally. Fabric is hand gathered and pulled through from back to front.


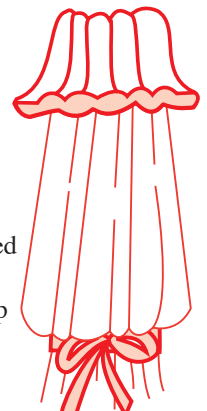


- Swag Holder can be mounted horizontally. Fabric is hand gathered and pulled through from front to back and then up and over the top covering the top of the bracket.


Bishop Sleeve/Pouff Swag Holder Instructions

Method 2


- Quickly forms beautifully decorated Pouff Swags.
- A full window treatment can be made using only 2 holders.
- Can be mounted to form topper for Bishop Sleeve Treatments.
- Swag holder extends out 5 3/4" from wall and can be used above or on either side of the window.
- Ideal for curved top or Palladian windows, as well as sliding & patio doors.
- Made of clear durable Lexan®.
- Instructions are included with every pouff swag holder.

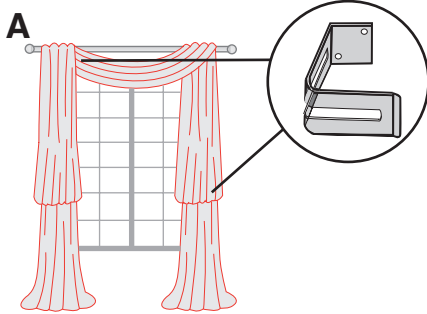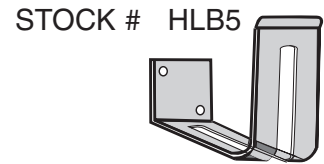

A. Swag holder is mounted horizontally. Fabric is hand gathered to form a swag across the front of the window. Fabric is then pulled from front to back then up and over the top of the holder. (Pull enough fabric to achieve the desired proportion in the jabot/bishop's sleeve).

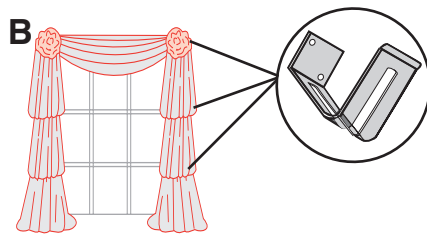

B. Swag Holder can be mounted vertically or on angle. Fabric is hand pleat folded and pulled through from back to front and then pouffed to achieve the desired design. Rosette (separate instructions available) can be made of coordinating fabric with swagged fabric draped in back.

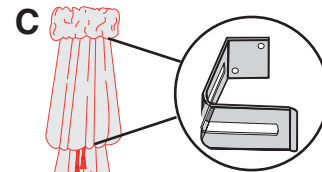

C. Swag Holder can be mounted horizontally. Fabric is hand gathered and pulled through from back to front.

Instructions for basic arch treatment using the Pouff Swag Holder shown.

These instructions call for 6 1/2 yds of 54" wide lined fabric for an arch window measuring 66" high x 37" wide. Ample fabric has been allowed for puddling if desired.

When figuring fabric allow 12" for each Pouff as you will bring approximately 6" doubled of fabric through each pouff bracket. This will give you enough fabric to swag the fabric between brackets.

* Fabric suggestions: Chinz, moire & lace work very well. Too thick fabric ie. casements or heavy weight fabrics do not work well.

Diagram 2


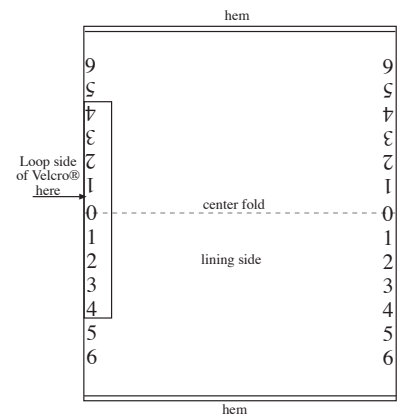


Diagram 1


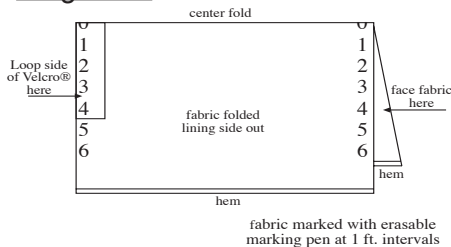


- Mark fabric as shown in diagram 2. Fold fabric in half - right sides facing out. Hand fold at 0 (which is center of fold shown in diagram 1). Bring 6" of folded fabric through back of bracket to front. You will have half the remaining fabric on the right & half on the left of the 1st or center bracket. Always start with the center bracket.

- It is basically double thickness folded going through the bracket. Then separate with half of the fabric to the left & half going to the right back side of each bracket to be able to work down each side of the window. At this point go to the next bracket on either right or left side & repeat the process again fan folding the fabric. Bring 6" through the next bracket & continue until all brackets on left & right sides are filled. Take note of your foot markings on the lining as you form the pouffs to be sure they will be the same size & to be sure you have equal fabric on each side.

After all Pouffs are brought through from back to front, go back & open or spread fabric pouff cover each bracket. To spread fabric; slip hand through fabric & spread with fingers forming a nice full pouff.

- Due to the design of the Pouff Swag Holder your pouff will have a nice full yet curved shape which will be as attractive from below as it is from the front.

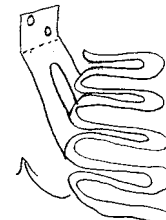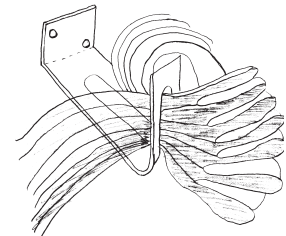

- This fabric will extend around the bracket once it is spread & the pouff is open. This will cover the bracket.