


Below is a helpful hint on how to install PVC Pipe in an inside mount. To do this you will need the following:

- 1 pc PVC Splice for 2" or 3" pipe (Our Stk Number PVC26 or PVC36).
- 1 pc PVC Pipe Mounting Bracket for 2" or 3" pipe (Our Stk Number PVC23 or PVC 33).
- 1 pc PVC Elbow Mounting Bracket for 2" or 3" pipe (Our Stk Number PVC24 or PVC34).
- 1 pc of PVC Pipe at least as long as the inside width of the window. One continuous piece will be much stronger than one that is spliced.

Install Pipe Mounting Bracket & PVC Elbow Mounting Bracket to inside of window. Because the two brackets are slightly different size, be sure to mount them in the correct alignment. Cut the PVC Pipe to the inside width of the window minus the length of the Elbow Mount Bracket of the appropriate diameter. After cutting, you should be able to just fit the pipe onto the Pipe Mounting Bracket and up in front of PVC Elbow Mounting Bracket

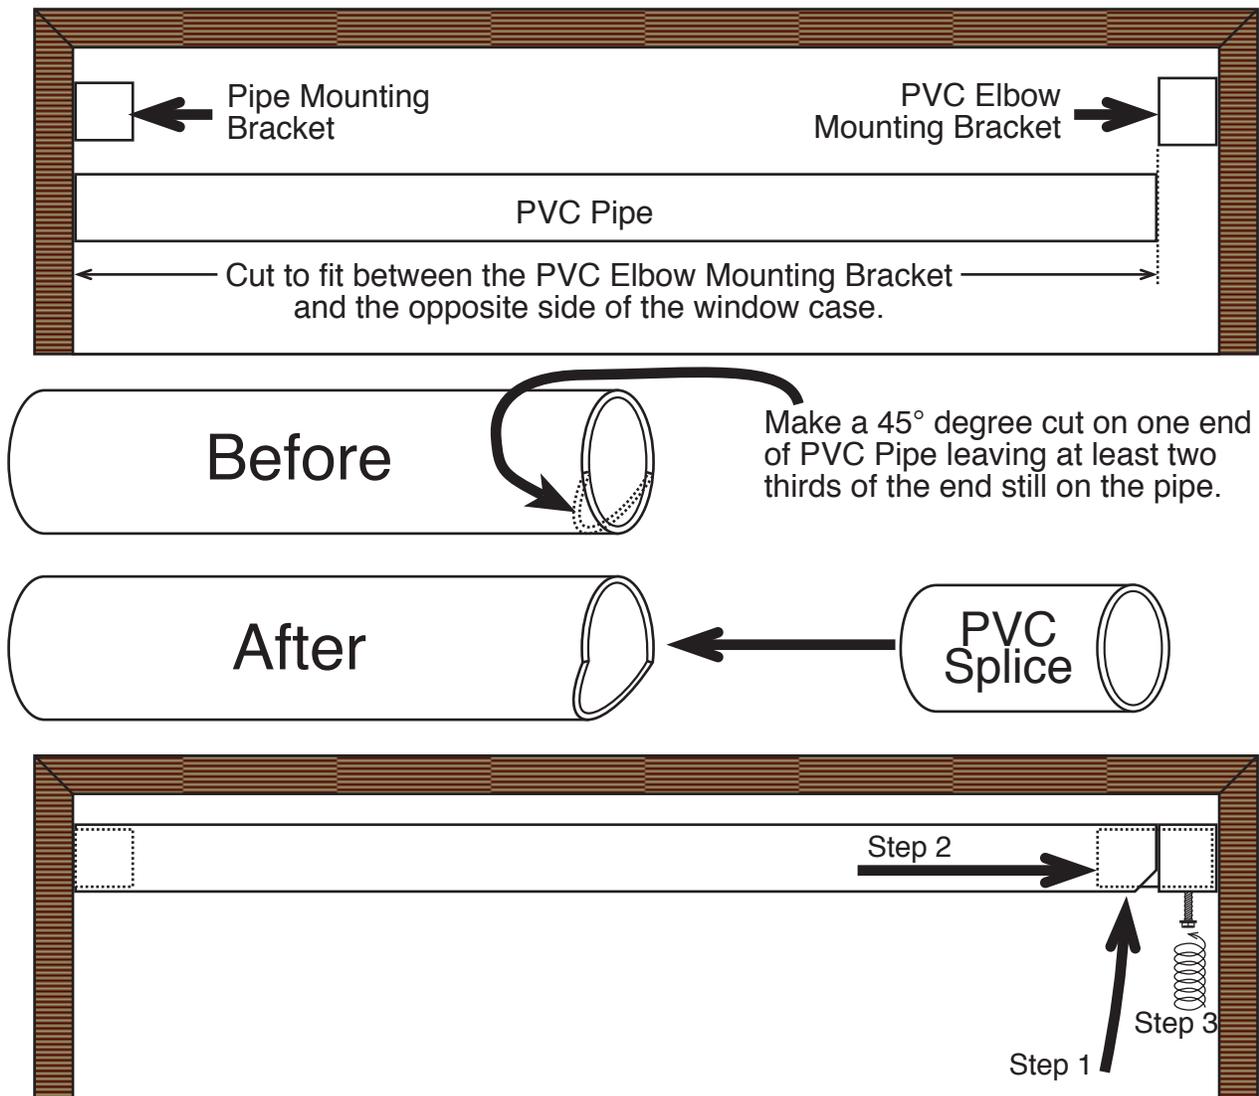

If fabric is to be shirred onto the pipe, do so now. Place a PVC Splice into the angled end of the pipe and swing the end up and in line with the Elbow Mounting Bracket. Hold in place and use your thumb to push the PVC Splice into the Elbow Bracket. Secure the pipe by running a screw through the bracket into the splice.