

### Fabricating a Double-Layered Window Treatment

The window from our Exquisite Dining Roomscape is a double-layer treatment featuring [Aria® Antiquities Metal Hardware](#). Follow along step-by-step as Donna Cash cuts and fabricates decorative pleated drapery panels as well as a sheer underlayer, both with unique details.



### Materials & Supplies

#### Rowley Products

	Item #
W&I Cambridge Sateen Lining	<a href="#">LNW44/</a>
W&I Hampton Cotton Interlining	<a href="#">LNW10/</a>
Jumbo Wonder Clips	<a href="#">QC42</a>
R-TEX Buckram - 6"	<a href="#">BN, BX</a>
Drapery Weights	<a href="#">LW</a>
Straight Edge Rulers	<a href="#">MR25, MR26</a>
Thread	<a href="#">Thread</a>
John James Hand Sewing Needles	<a href="#">TP100</a>
Quick Table Clamps	<a href="#">QC15</a>

### Fabricating a Double-Layered Window Treatment: Step-By-Step Instructions

#### Main Treatment:

- 1 Cut interlining, seam together, serge bottom hem.
- 2 Cut lining, seam together, turn up 6" for a double 3" hem, hem in your method of choice.
- 3 Cut Face Fabric (FF), find pattern match, seam, fold up 8" for a double 4" hem, hem in your method of choice.
- 4 Match pattern at seam by folding and pressing the selvage of the half width, finding the pattern match on the full width to complete the 'picture' of the pattern. Pin in place.



5 Sew seam using a split foot and placing the fold of the fabric along the inside edge of the right split of the foot and stitching on top of the fold near the edge.

6 Clip selvages.



7 Determine pleat to pattern design and heading embellishment design before marking in bottom hem or adding buckram.



8 Mark fabric and trim away fabric not needed for panel.



9 Table panels to finished length, insert buckram into header, press, keep in place with Jumbo Wonder Clips.



- 10 Place interlining on panel, wrong side up and matching seam to FF. Interlock FF and interlining at the seam. Place lining on top, seam side down. Interlock lining to interlining.



- 11 Cut away any excess lining and interlining at top of panel. Tuck into header.

- 12 Fold and press side hem and hem in your method of choice.

- 13 Carefully move panel across table (use Jumbo Wonder Clips to help keep all layers together) to complete header and side hem on second side of panel.



- 14 Fanfold the panel, pin pleats in place, place fabric bands on panel, all before stitching pleats in place.



- 15 Center pleat over pleat seam and finger press. Place a drapery pin into the back of drapery panel at the pleat seam, lightly catching the FF.



## Sheer Panel:

- 1 Table sheer with Eurohem at 112 ½" FL. 118" width. Place table weights on hem.



- 2 Insert Iron on Buckram into header, press at FL.




- 3 Press in a double 1 ½" side hem on each side of sheer panel and hem in your method of choice.



- 4 Determine placement of embellishment and buttons.



5 Apply the embellishment to the sheer panel.

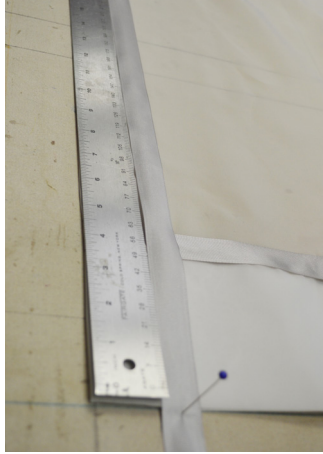


6 Make fabric covered buttons.



7 Mark pleats and spaces in sheer panel – stitch in place.



8 Add buttons to sheer to correspond to pattern design on drapery panel, sew in place.

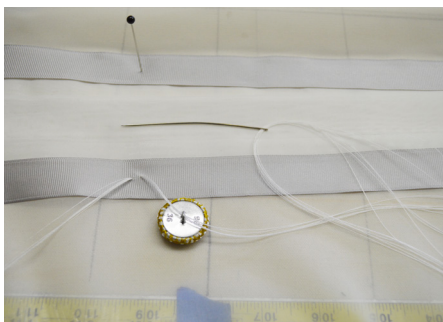

9

Sew buttons to pleats on sheer panel.

