

## Assemble Instruction on Soft Shade Clutch

Occasionally, a clutch can accidentally pop open. It can be re-assembled together without any tools. Figure 1 shows an assembled clutch. Figure 2 shows a disassembled clutch with 4 components, cover, springs housing and sprocket.

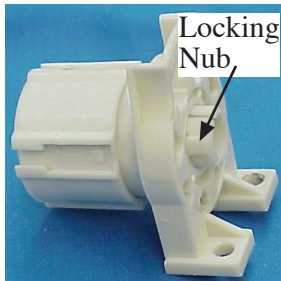


Figure 1. Assembled Clutch

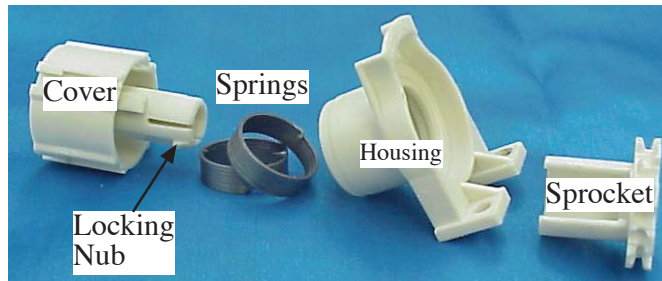


Figure 2. Disassembled Clutch

**Step 1.** Insert 2 springs into the housing as shown in Figure 3. The tangs on one spring should be in line with the tangs of the other spring.

**Step 2.** Insert sprocket into the housing as shown in Figure 4. Make sure the spring tangs are inside the opening of the sprocket as shown in Figure 5.

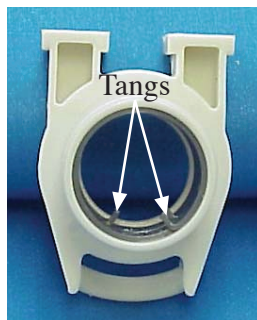


Figure 3  
Springs in Housing



Figure 4  
Insert Sprocket

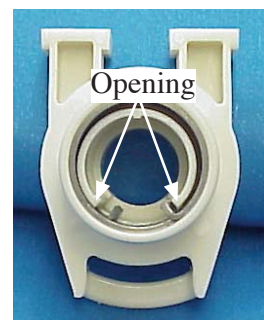


Figure 5  
Opening Inside Housing

**Step 3.** Position the key on the cover between the spring tangs (see Figure 6). Firmly push the cover and housing as shown in Figure 7, and squeeze the locking nub through the hole in the sprocket until you hear a "click" and the locking nub is completely exposed as shown in Figure 1.

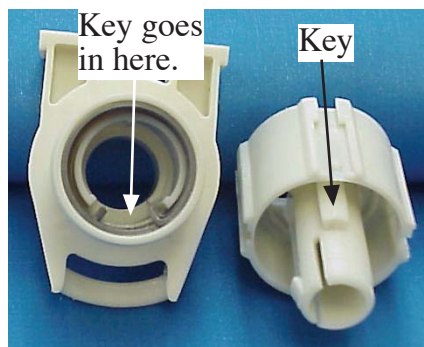


Figure 6  
Spring and Cover

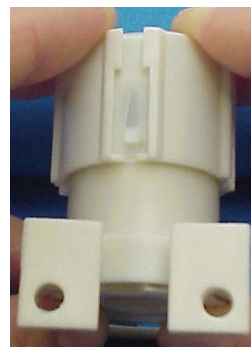


Figure 7  
Cover on